



Product Purpose:

The backpack is designed for carrying everyday items, school supplies, clothing, travel accessories, sports equipment, or other lightweight items, depending on the capacity and construction of the specific model. The product should be used according to its intended purpose. It is not designed for transporting people, animals, hazardous substances, sharp objects without proper protection, or loads exceeding the structural strength of the backpack.

Before First Use

Before first use, it is recommended to check the condition of the product, particularly the straps, handles, zippers, buckles, adjustment straps, seams, and compartments and pockets. All packaging elements should be removed. If any defects or damage to the product are noticed before use, do not use the backpack. It is advisable to contact the seller or manufacturer.

How to Use

Items should be placed in the backpack evenly. Heavier items should be positioned closer to the user's back, while lighter items should be further away. Avoid point pressure from sharp or hard objects on the material, seams, and zippers.

The backpack should be worn over both shoulders, with the straps properly adjusted. In models equipped with a chest or hip belt, it is recommended to use them, especially with heavier loads.

Do not yank on zippers, straps, handles, or buckles. Zippers should be closed and opened smoothly, without the use of excessive force.

Cleaning and Maintenance

The backpack should be cleaned by hand, using a damp cloth, sponge, or soft brush. For larger stains, a mild detergent diluted in water can be used. Bleaches, solvents, strong chemicals, or abrasive cleaners should not be used. Machine washing, spinning, tumble drying, ironing, or dry cleaning is not recommended unless the specifications for the model state otherwise. After cleaning, the backpack should be dried at room temperature in a well-ventilated place. Do not dry the product on a radiator, by a fire, with a hairdryer, or in direct, intense sunlight.

Storage

The backpack should be stored in a dry, clean, and ventilated place. Before long-term storage, the product should be emptied, cleaned, and completely dry.

Do not store the backpack in a wet condition, under heavy pressure, near heat sources, or in places exposed to mold, moisture, or chemicals.

Warnings and Safety Rules

The product is not a toy unless explicitly marked as a toy product. Children should use the backpack as intended and under the supervision of an adult, if warranted by the child's age. Keep packaging elements out of reach of children due to the risk of suffocation or choking. Do not use the backpack if any structural elements are damaged in a way that may affect safety during use. The product should be protected from fire, sharp tools, excessive loads, and prolonged exposure to moisture.

Water Resistance and Moisture Resistance

The backpack may exhibit limited resistance to splashing or brief contact with moisture due to the materials used. This does not imply full waterproofing unless the model is explicitly marked as waterproof. In case of contact with water, the backpack should be emptied and dried in a ventilated place.

Complaints and Liability

If a defect in the product is found, use should be discontinued and the seller or manufacturer should be contacted. Damage resulting from improper use, overloading, improper maintenance, washing contrary to recommendations, mechanical damage, natural wear, or unauthorized modifications to the product may not constitute a basis for a complaint.

Designed in Poland by:

3mk Protection Sp. z o.o.
Krotoszyńska 35, B-02/4a
63-400 Ostrów Wielkopolski
VAT ID PL 6222833086
3mk@3mk.pl

Made in China.