



FlowBuds™

Wireless headphones

User manual

EN

Product Presentation

3mk FlowBuds™ are headphones for every occasion! You can listen for up to 6.5 hours without charging while performing daily tasks. The ergonomic shape ensures that the headphones won't fall out even during vigorous movement. Take FlowBuds™ on a trip, to the office, or to the gym. With FlowBuds™, your day flows along nicely.

Package Contents:

1. Wireless in-ear headphones
2. Charging case
3. USB Type-C charging cable
4. User manual
5. Ear tips - S
6. Ear tips - L

Specifications:

- Name: 3mk FlowBuds
- Charging voltage: DC 5V
- Bluetooth version: 5.3
- Playback time: 6.5 hours
- Speaker size: 6 mm
- Standby time: 125 days
- Impedance: 16
- Battery capacity: 40 mAh
- Charging port: Type-C

- Charging case battery capacity: 300 mAh
- Frequency range: 20-20,000Hz
- Bluetooth signal distance: 10 m
- Charging time: 1.5 h

Instructions:

Turning on the headphones

1. Open the charging case; the headphones will turn on automatically.

2. To turn on the headphones when idle, press both earbuds for 3 seconds.

Turning off the headphones

1. Place the headphones in the case, then close it; the headphones will turn off.

2. The headphones will turn off automatically after 5 minutes without connecting to a sound source.

Bluetooth pairing

After taking the headphones out of the case, they will turn on automatically and the lights will start blinking; then click the Bluetooth name “3mk FlowBuds” on your mobile phone to connect.

Pairing Bluetooth with another device

If there is already a previously paired device nearby, go into Bluetooth settings and disconnect the current connection with the headphones; they will then switch to pairing mode and can be searched and paired with

another device again. If the previously paired device is not nearby, please follow the “Bluetooth Pairing” section.

Switching between paired devices

You need to go into Bluetooth settings and disconnect the current connection with the headphones, then enter the Bluetooth settings of the device you want to use and select “Connect”.

Forget Bluetooth pairing

A quick five-time click on either earbud, when it is turned on and not connected to a source device, will cause disconnection of pairing and readiness for subsequent pairing.

Charging the headphones

Place the earbud in the charger to charge it when the low battery signal is indicated.

User tips

1. If charging the earbud when it is wet from sweat, etc., the charging contacts may corrode. Wipe off moisture with a dry, soft cloth and allow it to dry naturally before recharging.

2. Do not leave the earbud in your pocket while washing clothes (pants, shirts, etc.).

Product Use

1. Use the original charging cable for charging. Fast charging is prohibited.

2. Before first using the headphones, charge the charging case.

3. The charging case indicator lights up while charging the case using a USB Type-C cable. After fully charging, the indicator stops blinking and lights up steadily.

4. The charging case indicator lights up steadily while charging the headphones. After fully charging, the indicator will stop shining.

Headphone Functions

1. Left earbud functions

Short press

1 click - decrease volume

2 clicks - play/pause

3 clicks - assistant

Long press

Long press 1s for previous track

1. Right earbud functions

Short press

1 click - increase volume

2 clicks - play/pause

3 clicks - assistant

Long press

Long press 1s for next track

1. Calling functions

Short press

2 clicks - answer/hang up the call

Long press

Long press 2s - reject the call

Safety Information

Before using and functioning the headphones, read the following tips to make the most of their capabilities and to avoid unsafe or illegal situations.

Hearing Loss

Listening to loud sounds can permanently damage hearing. When using headphones to listen to music or conduct calls, it is advisable to use the minimum volume required for music or calls to avoid hearing damage. Exposure to loud sounds while driving may distract the driver's attention and may cause an accident.

Operating Environment

Do not use the device in dusty, heavily soiled places, confined spaces, or near magnetic fields to avoid internal circuit failures of the device. When installing the device, avoid strong magnetic fields or electric devices with strong magnetic fields, such as ovens and refrigerators. Do not use the device during a thunderstorm. Lightning storms can cause equipment failure or electrical shock hazards. Use and store the device in temperatures between -10 °C to +40 °C. Excessive high or low ambient temperatures can cause device failure. At temperatures below 5°C, battery performance is limited. Do not place the device in direct sunlight, such as on a dashboard or

car window ledge. Do not place the device near sources of heat or open flames, such as electric heaters, stoves, water heaters, cookers, candles, or other places where there may be high temperatures. Avoid placing sharp metal objects, such as pins, near the earbud or the speaker of the device as they may stick to them and cause injury.

Child Safety

The device and its accessories may contain small parts. The device and its accessories should be stored out of reach of children. Children may accidentally damage the device and its accessories or swallow small parts, which can cause choking or other hazards. The device is not a toy; children should use it under adult supervision.

Battery Safety

Do not disassemble or modify the battery, nor immerse it in water or other liquids to avoid battery leakage, explosion, or fire. Do not throw, crush, or puncture the battery. It may cause internal short circuits and overheating. The device is equipped with a non-removable, built-in battery. Do not attempt to replace the battery yourself to avoid damaging the battery or the device.

Charger Safety

When charging the device, the power outlet should be installed near the device and should be easily accessible. After charging is complete or when charging is not taking

place, disconnect the charger from the device and unplug it from the wall socket.

Precautions

1. The headphones should be stored in a dry/ventilated place and should avoid contact with oil, steam, moisture, and dust to prevent product performance deterioration.
2. Use caution in cleaning the headphones; avoid using sharp organic solvents or items containing these components.
3. Headphones should be used properly, according to the requirements, and pay attention to the impact of the environment on the product. Ensure that connections are interference-free, and the distance between devices should not exceed 10 meters.
4. If the headphones do not connect or connect improperly, do not disassemble them or remove accessories. Otherwise, the warranty will be void.
5. When charging the headphones, use a standard car charger or a charger specified by our company.
6. To ensure proper use of the headphones, make sure they are fully charged.

Warranty

Incorrect use or improper placement of this product by users may result in shortened lifespan or damage, and any

damages arising from this are not covered by warranty or subject to manufacturer liability. The warranty covers manufacturing defects and material defects. The manufacturer's warranty is 24 months.

Disposal and Recycling Information

This symbol on the product, battery, documentation, or packaging indicates that products and batteries should be handed over to designated waste collection points after their operational life ends. This ensures that WEEE waste is recycled and processed in a manner that protects valuable materials and safeguards human health and the environment.

Declaration of Conformity

3mk Protection hereby declares that the product complies with the relevant EU harmonisation legislation: 2014/53/EU. The full text of the declaration of conformity is available at the following internet address (3mk.global/manual).

Designed in Poland by:

3mk Protection Sp. z o.o.
Krotoszyńska 35, B-02/4a
63-400 Ostrów Wielkopolski

VAT ID PL6222833086
3mk@3mk.pl

Manufactured in China.

