



## HARDY® StableMount 75™

Accessories, TV wall bracket

User manual

EN

### 1. General Information

The 3mk HARDY® StableMount 75™ wall mount is designed for mounting LCD / LED / OLED televisions compatible with VESA standards. It allows screen tilt adjustment, providing optimal viewing comfort. Before starting the installation, please read the entire content of this instruction thoroughly and keep it for future reference.

### 2. Package Contents (figure 1)

- wall mount body (bracket) – 1 pcs.
- mounting arms (hanging hook) – 2 pcs.
- mounting rails (hook rail) – 4 pcs.
- bolts M4 × 15 mm – 4 pcs.
- bolts M4 × 25 mm – 4 pcs.
- bolts M6 × 15 mm – 4 pcs.
- bolts M6 × 25 mm – 4 pcs.
- bolts M8 × 25 mm – 4 pcs.
- metal washers Ø6 mm – 4 pcs.
- plastic spacers 15 mm – 4 pcs.
- mounting screws for the wall M7 × 55 mm – 6 pcs.
- expansion plugs Ø10 mm – 6 pcs.
- mounting key (wrench) – 1 pcs.
- spirit level – 1 pcs.
- installation instructions – 1 pcs.

### Note:

The diagrams in the instructions are for illustrative purposes and may differ from the actual contents of the package. The list of items in point 2 is binding. The mounting elements included in the package are intended for wall mounting on concrete or solid brick. Mounting to wooden structures is only possible if the bracket is fastened to solid, load-bearing elements of the structure, using appropriate wood screws not included in the package. Mounting is not intended for drywall, OSB board, particle board, aerated concrete (e.g., gas concrete), or other lightweight or non-load-bearing constructions. The manufacturer is not responsible for the incorrect selection of mounting elements or installation that does not comply with these instructions.

### 3. Required Tools

- electric drill
- drill Ø10 mm (for concrete or brick)
- screwdriver
- hammer
- pencil
- mounting key (included with the package)
- level (included with the package)

### 4. Technical Specification (figure 2)

Model: 3mk HARDY® StableMount 75™

Mount Type: wall-mounted

Purpose: flat screen televisions

VESA Standard: max. 700 × 400 mm

Tilt Adjustment: approx. -3° / +12°

Horizontal Adjustment: up to 120° (depending on installation and TV size)

Distance from wall (range): approx. 55–415 mm

Recommended TV size: 55"–90"

Maximum load capacity: 75 kg

Material: cold-rolled steel with a protective coating

Sheet thickness: 1.2–1.8 mm

### 5. Preparation for Installation

Check the VESA standard and weight of your television.

Ensure that the wall is made of concrete or solid brick.

Prepare all tools and mounting elements.

It is recommended to perform the installation with two people.

### 6. Assembling the Bracket – Mounting the Mounting Rails (figure 3)

- Loosen the mounting bolts in the bracket body.
- Slide the mounting rails (hook rail) into the guides/lock in the bracket body.

- Tighten the mounting bolts to secure the rails.
- If the bracket has locking bolts for the rails (pre-installed), tighten them according to the bracket's construction. The locking bolts for the rails are pre-installed in the bracket body (8 pcs.).

### 7. Mounting the Bracket to the Wall (figure 4)

- Position the bracket body against the wall at the chosen location.
- Check the level of the bracket using the level.
- Mark the drilling locations for the holes.

**Note:** Before drilling, ensure that there are no electrical, water, or gas lines running through the wall.

- Drill Ø10 mm holes approximately 60 mm deep.

**Note:** Do not drill holes in the mortar between bricks. The mounting holes must be made in solid brick or concrete.

- Insert the expansion plugs into the holes (the plugs should fit tightly; if necessary, gently tap them in with a hammer).
- Screw the bracket to the wall using 6 M7 × 55 mm screws.
- Do not overtighten the screws. It is recommended to check the tightening periodically (approximately every 2 months).

### 8. Mounting the Arms to the TV (figure 5)

- Place the TV screen down on a soft, stable surface.
- Position the mounting arms over the VESA holes on the back of the TV.
- Note: Ensure that both arms are mounted at the same height.
- Select the appropriate screws, washers, and spacers.
- Screw in the arms without overtightening the screws.

### 9. Hanging the TV (figures 6 and 7)

**Note:** Recommended installation with two persons.

- Carefully hang the TV on the mounting rails.
- Ensure that the hooks are properly seated.
- Tighten the securing/blocking screws for the arms (according to the bracket's construction).
- Set the tilt angle and organize the cables.

The manufacturer is not responsible for damages resulting from improper installation or use not in accordance with the instructions.

### 10. Safety Warnings

Perform the installation only according to the instructions. Do not exceed the permissible weight of the television. Do not modify the construction of the bracket. Regularly check the tightening of the screws.

This product is not a toy - keep it out of reach of children.

### 11. Maintenance and Storage

Clean with a dry or slightly damp cloth. Do not use aggressive chemical agents. Store the product in a dry place.

### 12. Warranty

The product comes with a 24-month warranty from the manufacturer covering manufacturing defects and material defects. Damage resulting from improper installation or use is not covered by the warranty.

### 13. Disposal Information

The product must be disposed of in accordance with local waste management regulations. After use, return the product to a selective waste collection point. Metal components are recyclable.

### Designed in Poland by:

3mk Protection Sp. z o.o.  
Krotoszyńska 35, B-02/4a  
63-400 Ostrów Wielkopolski  
VAT ID PL 6222833086  
3mk@3mk.pl

Made in China.