



LifePods™

Wireless headphones

User manual

EN

Product Presentation

3mk LifePods™ are wireless earbuds equipped with technology: ANC - reduces external noise, and Transparency - amplifies surrounding sounds. The wide 13 mm membrane ensures high sound quality – identical to the source sound. Control is done via a convenient touch panel on each earbud. The earbuds quickly connect to your phone using Bluetooth 5.3 technology. The protective case also serves as a charger.

Package Contents:

1. Wireless in-ear headphones
2. Charging case
3. USB Type-C charging cable
4. User manual
5. Ear tips - S
6. Ear tips - L

Specifications:

- Name: 3mk LifePods
- Charging voltage: DC 5 V
- Bluetooth version: 5.3
- Playback time (without ANC): 6.5 hours
- Speaker size: 13 mm
- Playback time (with ANC): 5.5 hours
- Impedance: 32

- Standby time: 140 days
- Charging port: Type-C
- Battery capacity: 33 mAh
- Frequency range: 20-20,000 Hz
- Charging case battery capacity: 320 mAh
- Charging time: 1.5 h
- Bluetooth signal range: 15 m

Operation Instructions:

Turning on the earbuds

1. Open the case lid, the earbuds will turn on automatically.
2. To turn on the earbuds while idle, press both earbuds for 3 seconds.

Turning off the earbuds

1. Place the earbuds in the case, then close it; the earbuds will turn off.

Pairing via Bluetooth

After removing the earbuds from the case, they will turn on automatically and the LED will start blinking; then click on the Bluetooth name "3mk LifePods" on your mobile phone to connect.

Pairing with another Bluetooth device

1. If a previously paired device is nearby, go to Bluetooth settings and disconnect the current connection from the earbuds, then they will switch to pairing mode and can be found again and paired with another device.

2. If the previously paired device is not nearby, please follow the "Bluetooth Pairing" section.

Switching between paired devices

Go to Bluetooth settings to disconnect the current connection with the earbuds, then access the Bluetooth settings of the device you want to use and select "Connect".

Forgetting the Bluetooth pairing

A quick five-time click on either earbud while it's on will turn off the earbuds. Upon restarting, the pairing history information will be deleted.

Usage Tips

1. Read this manual thoroughly before use.

2. If charging the earbuds while they are wet from sweat, etc., the charging contacts may corrode. Wipe moisture with a dry, soft cloth and allow them to dry naturally before recharging.

3. Do not leave the earbuds in your pocket while washing clothes (trousers, shirts, etc.).

Usage Tips

1. Read this manual thoroughly before use.
2. If charging the earbuds while they are wet from sweat, etc., the charging contacts may corrode. Wipe moisture with a dry, soft cloth and allow them to dry naturally before recharging.
3. Do not leave the earbuds in your pocket while washing clothes (trousers, shirts, etc.).

Product Use

1. Use the original charging cable for charging. Fast charging is prohibited.
2. Before first use, charge the charging case.

Earbud Functions

1. Functions of the left earbud

Short press

1 click - decrease volume

2 clicks - play/pause

3 clicks - assistant (ANC / Transparency / ANC off)

Long press

Long press 2 s - previous track

Long press 2 s - next track

1. Calling functions

Short press

2 clicks - answer/end call

Long press

3. The indicator lights on the charging case blink while charging the case using a USB Type-C cable. Once fully charged, the lights stop blinking and show a steady light.

4. The indicator lights on the charging case show a steady light while charging the earbuds. Once fully charged, the indicator lights will stop shining.

Long press 2 s - reject call

Safety Information

Before using the earbuds, read the following tips to make the most of their capabilities and avoid any dangerous or illegal situations.

Hearing Loss

Listening to loud sounds can permanently damage hearing. When using earbuds to listen to music or make calls, it is advisable to use the minimum volume needed for music or calls to avoid hearing damage. Exposure to loud sounds while driving can distract the driver's attention and lead to an accident.

Operating Environment

The device should not be used in dusty, heavily soiled environments, small spaces, or near magnetic fields to avoid internal circuit failure. Avoid strong magnetic fields or electrical devices with strong magnetic fields, such as ovens and refrigerators, while installing the device. Do not use the device during a storm. Lightning storms can cause equipment failure or electrocution risks. Use the device within the temperature range -10°C to +55°C, while storing the device and its accessories within the temperature range -40°C to +70°C. Excessively high or low ambient temperatures can cause device failure. At temperatures below 5°C, battery performance is limited. Do not place the device in direct sunlight, such as on the

dashboard of a car or on a window ledge. Do not place the device near heat sources or open flames, such as electric heaters, stoves, water heaters, cookers, candles, or other areas where high temperatures might occur. Sharp metal objects, such as pins, should not be placed near the earbud or speaker of the device, as they may stick to them and cause bodily injuries.

Children's Health

The device and its accessories may contain small parts. The device and its accessories should be stored out of reach of children. Children may accidentally damage the device and its accessories or swallow small parts, which could cause choking or other hazards. The device is not a toy; children should use it under adult supervision.

Battery Safety

Do not disassemble or modify the battery, or immerse it in water or other liquids, to avoid battery leakage, explosion, or fire. Do not throw, crush, or puncture the battery, as it may cause internal short circuits and overheating. The device has a non-removable built-in battery. Do not replace the battery yourself to avoid damaging the battery or the device.

Charger Safety

When charging the device, the power outlet should be installed near the device and easily accessible. After charging is complete, or when the device is not charging, unplug the charger and remove the plug from the outlet.

1. Functions of the right earbud

Short press

1 click - increase volume

2 clicks - play/pause

3 clicks - assistant

Long press

Long press 2 s - previous track

Long press 2 s - next track

1. Calling functions

Short press

2 clicks - answer/end call

Long press

Long press 2 s - reject call

Safety Information

Before using the earbuds, read the following tips to make the most of their capabilities and avoid any dangerous or illegal situations.

Hearing Loss

Listening to loud sounds can permanently damage hearing. When using earbuds to listen to music or make calls, it is advisable to use the minimum volume needed for music or calls to avoid hearing damage. Exposure to loud sounds while driving can distract the driver's attention and lead to an accident.

Operating Environment

The device should not be used in dusty, heavily soiled environments, small spaces, or near magnetic fields to avoid internal circuit failure. Avoid strong magnetic fields or electrical devices with strong magnetic fields, such as ovens and refrigerators, while installing the device. Do not use the device during a storm. Lightning storms can cause equipment failure or electrocution risks. Use the device within the temperature range -10°C to +55°C, while storing the device and its accessories within the temperature range -40°C to +70°C. Excessively high or low ambient temperatures can cause device failure. At temperatures below 5°C, battery performance is limited. Do not place the device in direct sunlight, such as on the

dashboard of a car or on a window ledge. Do not place the device near heat sources or open flames, such as electric heaters, stoves, water heaters, cookers, candles, or other areas where high temperatures might occur. Sharp metal objects, such as pins, should not be placed near the earbud or speaker of the device, as they may stick to them and cause bodily injuries.

Children's Health

The device and its accessories may contain small parts. The device and its accessories should be stored out of reach of children. Children may accidentally damage the device and its accessories or swallow small parts, which could cause choking or other hazards. The device is not a toy; children should use it under adult supervision.

Battery Safety

Do not disassemble or modify the battery, or immerse it in water or other liquids, to avoid battery leakage, explosion, or fire. Do not throw, crush, or puncture the battery, as it may cause internal short circuits and overheating. The device has a non-removable built-in battery. Do not replace the battery yourself to avoid damaging the battery or the device.

Charger Safety

When charging the device, the power outlet should be installed near the device and easily accessible. After charging is complete, or when the device is not charging, unplug the charger and remove the plug from the outlet.

1. Functions of the left earbud

Short press

1 click - decrease volume

2 clicks - play/pause

3 clicks - assistant (ANC / Transparency / ANC off)

Long press

Long press 2 s - previous track

Long press 2 s - next track

1. Calling functions

Short press

2 clicks - answer/end call

Long press

Long press 2 s - reject call

Safety Information

Before using the earbuds, read the following tips to make the most of their capabilities and avoid any dangerous or illegal situations.

Hearing Loss

Listening to loud sounds can permanently damage hearing. When using earbuds to listen to music or make calls, it is advisable to use the minimum volume needed for music or calls to avoid hearing damage. Exposure to loud sounds while driving can distract the driver's attention and lead to an accident.

Operating Environment

The device should not be used in dusty, heavily soiled environments, small spaces, or near magnetic fields to avoid internal circuit failure. Avoid strong magnetic fields or electrical devices with strong magnetic fields, such as ovens and refrigerators, while installing the device. Do not use the device during a storm. Lightning storms can cause equipment failure or electrocution risks. Use the device within the temperature range -10°C to +55°C, while storing the device and its accessories within the temperature range -40°C to +70°C. Excessively high or low ambient temperatures can cause device failure. At temperatures below 5°C, battery performance is limited. Do not place the device in direct sunlight, such as on the

dashboard of a car or on a window ledge. Do not place the device near heat sources or open flames, such as electric heaters, stoves, water heaters, cookers, candles, or other areas where high temperatures might occur. Sharp metal objects, such as pins, should not be placed near the earbud or speaker of the device, as they may stick to them and cause bodily injuries.

Children's Health

The device and its accessories may contain small parts. The device and its accessories should be stored out of reach of children. Children may accidentally damage the device and its accessories or swallow small parts, which could cause choking or other hazards. The device is not a toy; children should use it under adult supervision.

Battery Safety

Do not disassemble or modify the battery, or immerse it in water or other liquids, to avoid battery leakage, explosion, or fire. Do not throw, crush, or puncture the battery, as it may cause internal short circuits and overheating. The device has a non-removable built-in battery. Do not replace the battery yourself to avoid damaging the battery or the device.

Charger Safety

When charging the device, the power outlet should be installed near the device and easily accessible. After charging is complete, or when the device is not charging, unplug the charger and remove the plug from the outlet.

Warranty

Improper use or incorrect placement of this product by users may result in a shortened lifespan or damage, and any resulting damage is not covered by the warranty or is not the manufacturer's responsibility. The warranty

1. Functions of the right earbud

Short press

1 click - increase volume

2 clicks - play/pause

3 clicks - assistant

Long press

Long press 2 s - previous track

Long press 2 s - next track

1. Calling functions

Short press

2 clicks - answer/end call

Long press

Long press 2 s - reject call

Safety Information

Before using the earbuds, read the following tips to make the most of their capabilities and avoid any dangerous or illegal situations.

Hearing Loss

Listening to loud sounds can permanently damage hearing. When using earbuds to listen to music or make calls, it is advisable to use the minimum volume needed for music or calls to avoid hearing damage. Exposure to loud sounds while driving can distract the driver's attention and lead to an accident.

Operating Environment

The device should not be used in dusty, heavily soiled environments, small spaces, or near magnetic fields to avoid internal circuit failure. Avoid strong magnetic fields or electrical devices with strong magnetic fields, such as ovens and refrigerators, while installing the device. Do not use the device during a storm. Lightning storms can cause equipment failure or electrocution risks. Use the device within the temperature range -10°C to +55°C, while storing the device and its accessories within the temperature range -40°C to +70°C. Excessively high or low ambient temperatures can cause device failure. At temperatures below 5°C, battery performance is limited. Do not place the device in direct sunlight, such as on the

dashboard of a car or on a window ledge. Do not place the device near heat sources or open flames, such as electric heaters, stoves, water heaters, cookers, candles, or other areas where high temperatures might occur. Sharp metal objects, such as pins, should not be placed near the earbud or speaker of the device, as they may stick to them and cause bodily injuries.

Children's Health

The device and its accessories may contain small parts. The device and its accessories should be stored out of reach of children. Children may accidentally damage the device and its accessories or swallow small parts, which could cause choking or other hazards. The device is not a toy; children should use it under adult supervision.

Battery Safety

Do not disassemble or modify the battery, or immerse it in water or other liquids, to avoid battery leakage, explosion, or fire. Do not throw, crush, or puncture the battery, as it may cause internal short circuits and overheating. The device has a non-removable built-in battery. Do not replace the battery yourself to avoid damaging the battery or the device.

Charger Safety

When charging the device, the power outlet should be installed near the device and easily accessible. After charging is complete, or when the device is not charging, unplug the charger and remove the plug from the outlet.

Warranty

Improper use or incorrect placement of this product by users may result in a shortened lifespan or damage, and any resulting damage is not covered by the warranty or is not the manufacturer's responsibility. The warranty

1. Functions of the left earbud

Short press

1 click - decrease volume

2 clicks - play/pause

3 clicks - assistant (ANC / Transparency / ANC off)

Long press

Long press 2 s - previous track

Long press 2 s - next track

1. Calling functions

Short press

2 clicks - answer/end call

Long press

Long press 2 s - reject call

Safety Information

Before using the earbuds, read the following tips to make the most of their capabilities and avoid any dangerous or illegal situations.

Hearing Loss

Listening to loud sounds can permanently damage hearing. When using earbuds to listen to music or make calls, it is advisable to use the minimum volume needed for music or calls to avoid hearing damage. Exposure to loud sounds while driving can distract the driver's attention and lead to an accident.

Operating Environment

The device should not be used in dusty, heavily soiled environments, small spaces, or near magnetic fields to avoid internal circuit failure. Avoid strong magnetic fields or electrical devices with strong magnetic fields, such as ovens and refrigerators, while installing the device. Do not use the device during a storm. Lightning storms can cause equipment failure or electrocution risks. Use the device within the temperature range -10°C to +55°C, while storing the device and its accessories within the temperature range -40°C to +70°C. Excessively high or low ambient temperatures can cause device failure. At temperatures below 5°C, battery performance is limited. Do not place the device in direct sunlight, such as on the

dashboard of a car or on a window ledge. Do not place the device near heat sources or open flames, such as electric heaters, stoves, water heaters, cookers, candles, or other areas where high temperatures might occur. Sharp metal objects, such as pins, should not be placed near the earbud or speaker of the device, as they may stick to them and cause bodily injuries.

Children's Health

The device and its accessories may contain small parts. The device and its accessories should be stored out of reach of children. Children may accidentally damage the device and its accessories or swallow small parts, which could cause choking or other hazards. The device is not a toy; children should use it under adult supervision.

Battery Safety

Do not disassemble or modify the battery, or immerse it in water or other liquids, to avoid battery leakage, explosion, or fire. Do not throw, crush, or puncture the battery, as it may cause internal short circuits and overheating. The device has a non-removable built-in battery. Do not replace the battery yourself to avoid damaging the battery or the device.

Charger Safety

When charging the device, the power outlet should be installed near the device and easily accessible. After charging is complete, or when the device is not charging, unplug the charger and remove the plug from the outlet.

Warranty

Improper use or incorrect placement of this product by users may result in a shortened lifespan or damage, and any resulting damage is not covered by the warranty or is not the manufacturer's responsibility. The warranty

1. Functions of the right earbud

Short press

1 click - increase volume

2 clicks - play/pause

3 clicks - assistant

Long press

Long press 2 s - previous track

Long press 2 s - next track

1. Calling functions

Short press

2 clicks - answer/end call

Long press

Long press 2 s - reject call

Safety Information

Before using the earbuds, read the following tips to make the most of their capabilities and avoid any dangerous or illegal situations.

Hearing Loss

Listening to loud sounds can permanently damage hearing. When using earbuds to listen to music or make calls, it is advisable to use the minimum volume needed for music or calls to avoid hearing damage. Exposure to loud sounds while driving can distract the driver's attention and lead to an accident.

Operating Environment

The device should not be used in dusty, heavily soiled environments, small spaces, or near magnetic fields to avoid internal circuit failure. Avoid strong magnetic fields or electrical devices with strong magnetic fields, such as ovens and refrigerators, while installing the device. Do not use the device during a storm. Lightning storms can cause equipment failure or electrocution risks. Use the device within the temperature range -10°C to +55°C, while storing the device and its accessories within the temperature range -40°C to +70°C. Excessively high or low ambient temperatures can cause device failure. At temperatures below 5°C, battery performance is limited. Do not place the device in direct sunlight, such as on the

dashboard of a car or on a window ledge. Do not place the device near heat sources or open flames, such as electric heaters, stoves, water heaters, cookers, candles, or other areas where high temperatures might occur. Sharp metal objects, such as pins, should not be placed near the earbud or speaker of the device, as they may stick to them and cause bodily injuries.

Children's Health

The device and its accessories may contain small parts. The device and its accessories should be stored out of reach of children. Children may accidentally damage the device and its accessories or swallow small parts, which could cause choking or other hazards. The device is not a toy; children should use it under adult supervision.

Battery Safety

Do not disassemble or modify the battery, or immerse it in water or other liquids, to avoid battery leakage, explosion, or fire. Do not throw, crush, or puncture the battery, as it may cause internal short circuits and overheating. The device has a non-removable built-in battery. Do not replace the battery yourself to avoid damaging the battery or the device.

Charger Safety

When charging the device, the power outlet should be installed near the device and easily accessible. After charging is complete, or when the device is not charging, unplug the charger and remove the plug from the outlet.

Warranty

Improper use or incorrect placement of this product by users may result in a shortened lifespan or damage, and any resulting damage is not covered by the warranty or is not the manufacturer's responsibility. The warranty

1. Functions of the left earbud

Short press

1 click - decrease volume

2 clicks - play/pause

3 clicks - assistant (ANC / Transparency / ANC off)

Long press

Long press 2 s - previous track

Long press 2 s - next track

1. Calling functions

Short press

2 clicks - answer/end call

Long press

Long press 2 s - reject call

Safety Information

Before using the earbuds, read the following tips to make the most of their capabilities and avoid any dangerous or illegal situations.

Hearing Loss

Listening to loud sounds can permanently damage hearing. When using earbuds to listen to music or make calls, it is advisable to use the minimum volume needed for music or calls to avoid hearing damage. Exposure to loud sounds while driving can distract the driver's attention and lead to an accident.

Operating Environment

The device should not be used in dusty, heavily soiled environments, small spaces, or near magnetic fields to avoid internal circuit failure. Avoid strong magnetic fields or electrical devices with strong magnetic fields, such as ovens and refrigerators, while installing the device. Do not use the device during a storm. Lightning storms can cause equipment failure or electrocution risks. Use the device within the temperature range -10°C to +55°C, while storing the device and its accessories within the temperature range -40°C to +70°C. Excessively high or low ambient temperatures can cause device failure. At temperatures below 5°C, battery performance is limited. Do not place the device in direct sunlight, such as on the

dashboard of a car or on a window ledge. Do not place the device near heat sources or open flames, such as electric heaters, stoves, water heaters, cookers, candles, or other areas where high temperatures might occur. Sharp metal objects, such as pins, should not be placed near the earbud or speaker of the device, as they may stick to them and cause bodily injuries.

Children's Health